

DIRECTIONS FOR OPERATING **EVERSHARP** REPEATING PENCIL

TO USE PENCIL—
hold pencil in writing position and press Magic-Button. Leads feed continuously.

TO REPEL LEAD—
hold Magic-Button down—push lead back with finger.

TO RELOAD PENCIL—
remove Magic-Button—drop Eversharp Red Top Leads into magazine. For best performance use only Eversharp Red Top Leads because they are specially designed to fit Eversharp Pencils.

TO USE ERASER—
reverse Magic-Button in barrel.

See next page for more detailed instructions.

EVERSHARP, INC.
1800 Roscoe St. Chicago

FORM No. 111 Rev. 12-40
Printed in U.S.A.

EVERSHARP Gold Seal REPEATER GUARANTEED FOREVER

The interior mechanism of the Eversharp Repeating Pencil—identified by the GOLD SEAL—is GUARANTEED FOREVER against wear and to be free of defective materials and workmanship. This means specifically it is guaranteed to give you mechanical service without limitation as to years.

If your Eversharp Repeating pencil fails to give satisfactory mechanical service due to wear, faulty materials, or workmanship (not damage or abuse) repair or replacement will be made without cost—except for a slight service charge of thirty-five cents (35c) to cover handling, return postage, and insurance against loss in transit. Also, a reasonable charge will be made for missing parts and parts which must be replaced due to causes other than defect.

Only genuine Eversharp parts may be used in this pencil. If any other are used, the guarantee is void—but may be reinstated by having the pencil properly repaired with genuine Eversharp parts at regular list prices.

For prompt service mail, together with signed guarantee coupon, either to our factory or your Eversharp dealer.

Date _____

Dealer's Name _____

Eversharp, Inc. 1800 Roscoe Street Chicago

MODERN...and so EASY to Operate

HOW TO USE PENCIL

1. Hold pencil with point down. Press Magic-Button (A) until lead appears at tip. See figure 1. As lead is used, simply press the Magic-Button and more lead will appear. Sixteen sticks of lead can be used in this way before it is necessary to refill the pencil.



HOW TO RELOAD PENCIL

2. Remove Magic-Button. See figure 2. Drop 16 Red Top leads into pencil.



3. Note: Never load with more than sixteen sticks of lead. Avoid overloading case. Before filling the magazine, be sure all leads are used. To make sure, shake the pencil several times and listen for rattle of lead sticks. **For best performance, use only genuine Eversharp Red Top Leads.**

4. When metal collar appears at base of Magic-Button (A), it generally indicates that pencil is out of lead.

HOW TO REPEL LEAD

5. If too much lead extends from the pencil's tip, hold the Magic-Button down and push the lead back with your finger. See figure 3.



HOW TO CLEAN TIP

6. Unscrew tip (B) counter-clockwise. Push a pin or small wire through the tip being sure to punch out all small chips or particles before replacing. See figure 4.



HOW TO USE ERASER

7. Pull Magic-Button (A) out of barrel, reverse and put back so that the eraser is exposed for use.

HOW TO RENEW ERASER

8. Remove Magic-Button (A). Insert a pin point in small hole (S) of Magic-Button (A). Pry out worn eraser and bushing (H). Pull eraser out of bushing until a suitable portion of the eraser extends above top of bushing (H). See figure 5. Reinsert eraser into Magic-Button.



9. When eraser is completely worn out replace with new No.5R Eversharp eraser.